


FRONT PART


TROLLEY

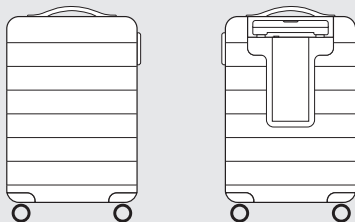

Mobile and
Tablet Holder



USB
Connection

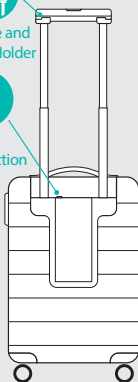


Security
Lock



Shopping Bag
Holder



Document and
Power Bank
Compartment

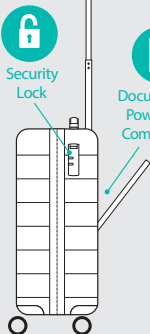

ITEM 6016

BACK PART

INSTRUCTIONS FOR USE

The lock is pre-set at 0-0-0.

To change the code, follow the below instructions:

- Push and release button (1) in the direction of the arrow.
Then using a pen or an object with a pointed end, push down the reset button (2) until you hear it click.
- Turn the dials to set each number to your selected combination code.
- Push button (1) again until it clicks and your new combination code is now set.
- For security, rotate the dials so that your selected code cannot be seen.
- To open the lock, turn the dials to your selected code and slide button (1) in the direction of the arrow.

INSTRUCCIONES DE USO

La combinación por defecto es 0-0-0.

Para cambiarla, siga los siguientes pasos:

- Presionar y soltar el botón (1) en la dirección de la flecha. Después presionar el botón (2) con ayuda de un bolígrafo o algún objeto punzante, hasta oír el clic.
- Colocar cada número de la combinación elegida.
- Presionar de nuevo el botón (1), hasta oír de nuevo el clic y la combinación será ahora la seleccionada.
- Por seguridad, gire los diales para que su combinación no pueda ser vista.
- Para abrirla, introduzca la combinación seleccionada previamente y presione el botón (1) en la dirección de la flecha.

